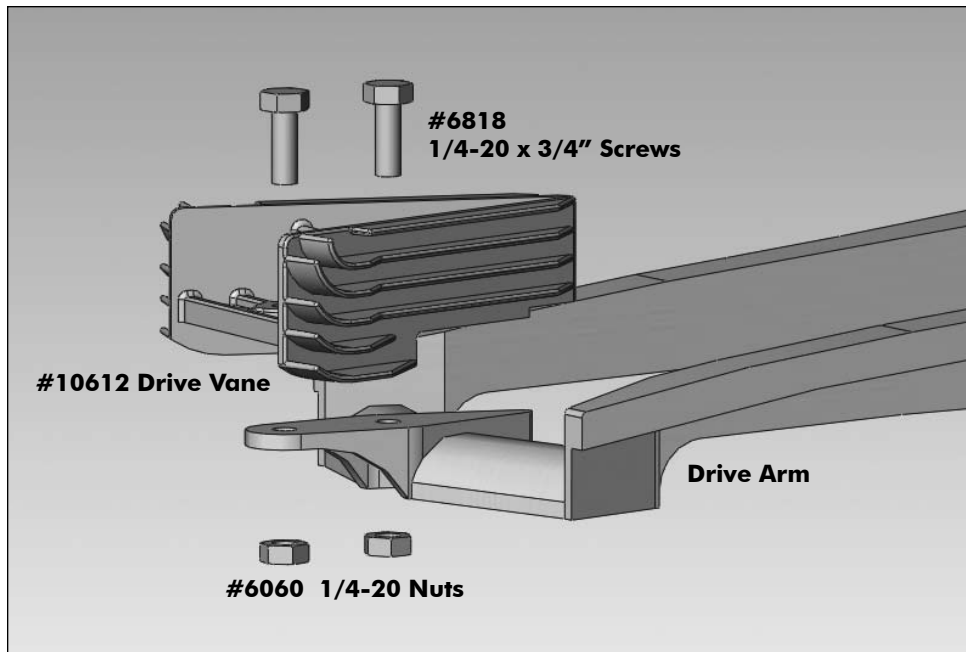
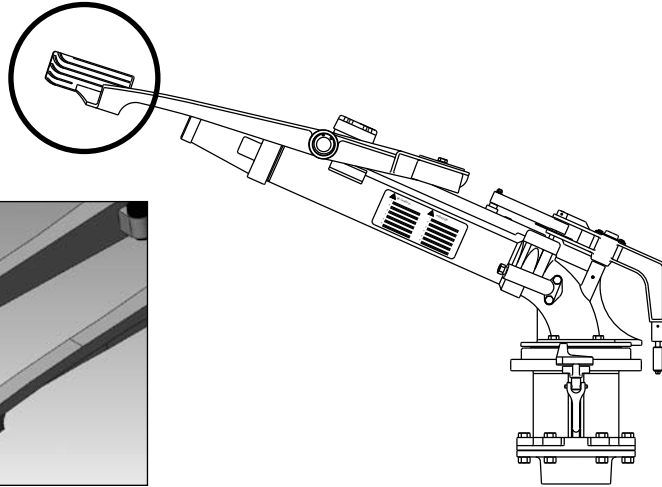
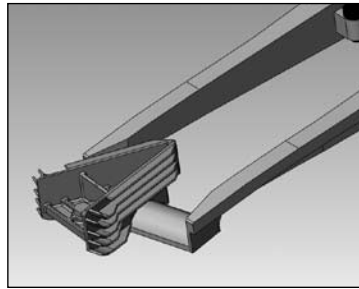


innovation in irrigation™

NELSON**SR100 BIG GUN®****SR100 BIG GUN — LOW PRESSURE DRIVE VANE**

Low Pressure
Drive Vane
Kit #9857

**INSTALLATION INSTRUCTIONS:**

1. Remove two #6818 1/4-20 x 3/4" screws and #6060 nuts holding the #8231 Drive Vane to Drive Arm.
2. Install #10612 Drive Vane to the Drive Arm with two #6818 1/4-20 x 3/4" screws with #6060 nuts.